



PRINT AT 100 % · NO SCALING · NO FIT-TO-PAGE

Assembly: face ORDER and ROTATION do not matter — the cube self-surveys on its first shoot. Use each face once; once assembled, do not re-seat (re-seating = new self-survey).

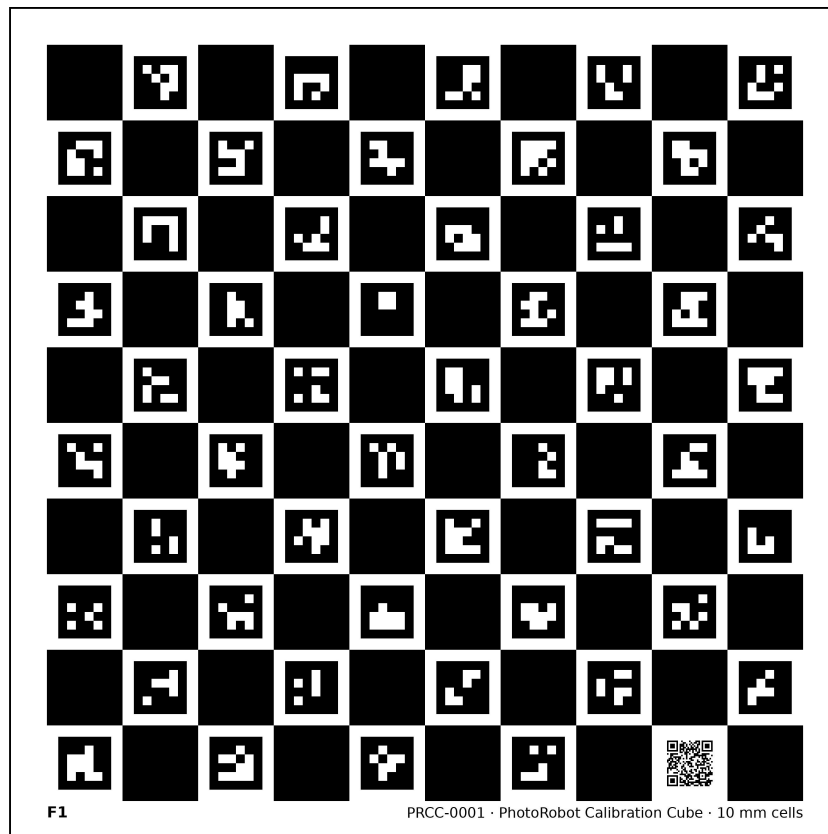


Verify BEFORE cutting, on the GRID corners: outer edge 100.00 mm (both axes) · corner-to-corner 141.42 mm.
Cut ON the frame line (110 × 110 — it hides in the holder rebate). If off, record the measured value with the serial.

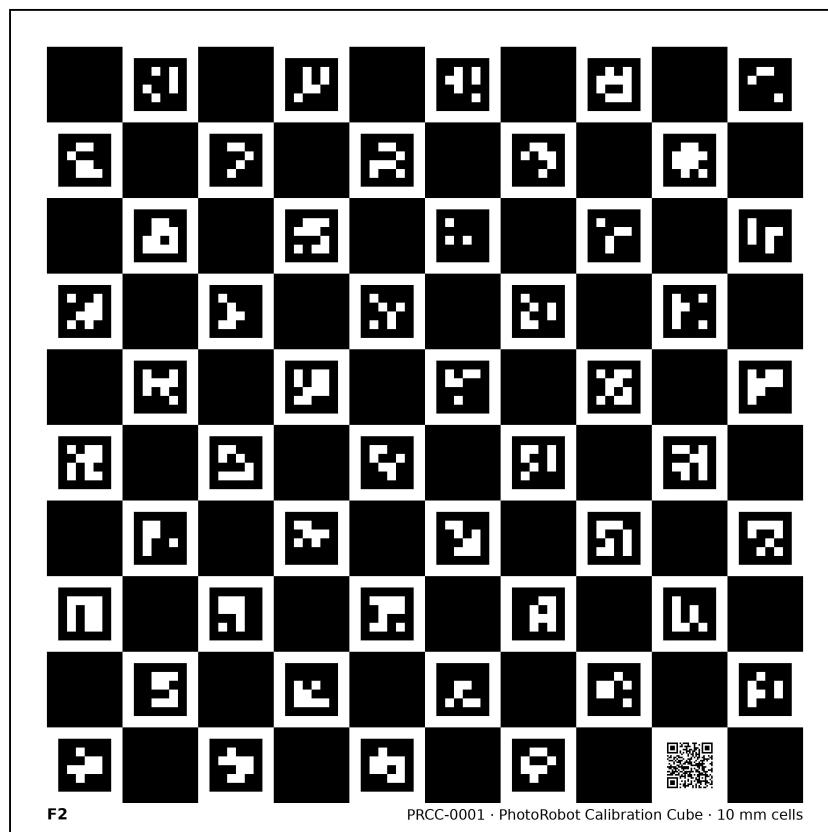


Verify BEFORE cutting, on the GRID corners: outer edge 100.00 mm (both axes) · corner-to-corner 141.42 mm.
Cut ON the frame line (110 × 110 — it hides in the holder rebate). If off, record the measured value with the serial.

PRINT AT 100 % · NO SCALING · NO FIT-TO-PAGE

Assembly: face ORDER and ROTATION do not matter — the cube self-surveys on its first shoot. Use each face once; once assembled, do not re-seat (re-seating = new self-survey).

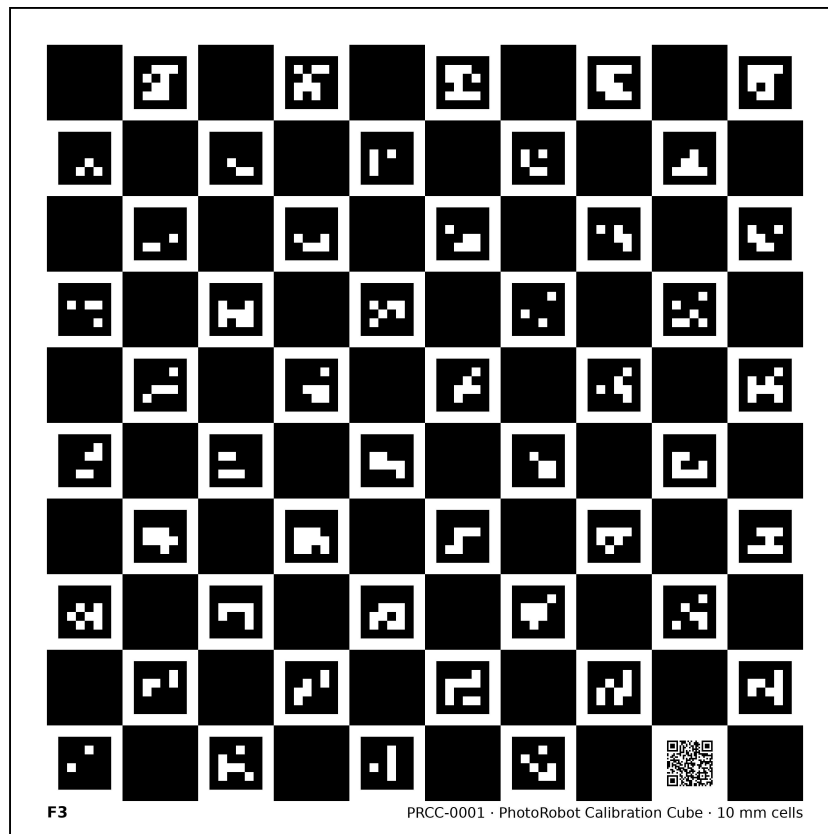


Verify BEFORE cutting, on the GRID corners: outer edge 100.00 mm (both axes) · corner-to-corner 141.42 mm.
Cut ON the frame line (110 × 110 — it hides in the holder rebate). If off, record the measured value with the serial.

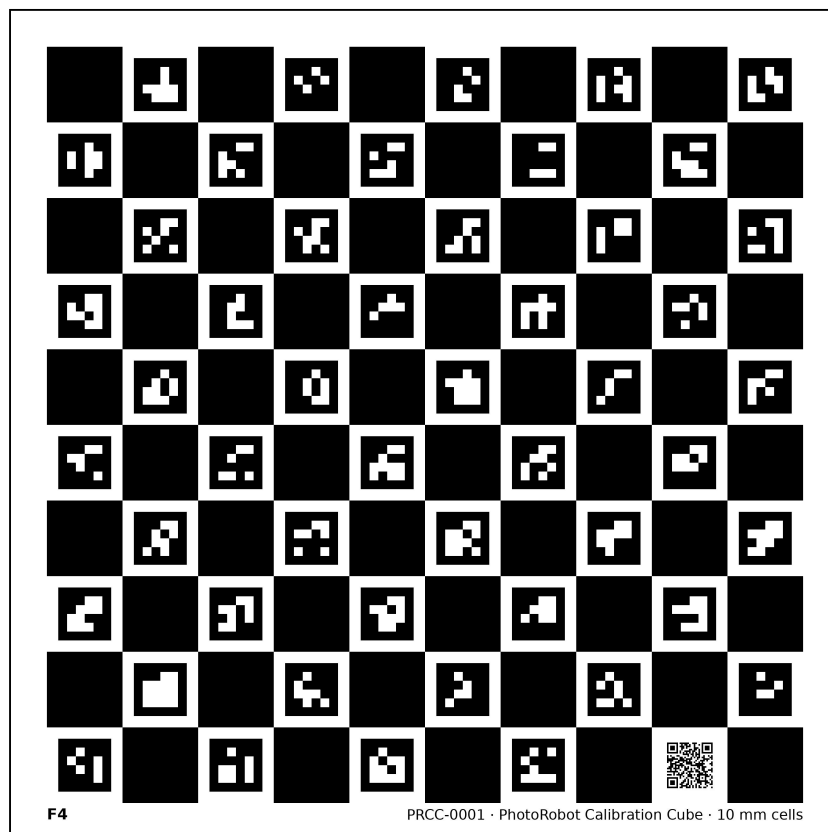


Verify BEFORE cutting, on the GRID corners: outer edge 100.00 mm (both axes) · corner-to-corner 141.42 mm.
Cut ON the frame line (110 × 110 — it hides in the holder rebate). If off, record the measured value with the serial.

PRINT AT 100 % · NO SCALING · NO FIT-TO-PAGE

Assembly: face ORDER and ROTATION do not matter — the cube self-surveys on its first shoot. Use each face once; once assembled, do not re-seat (re-seating = new self-survey).

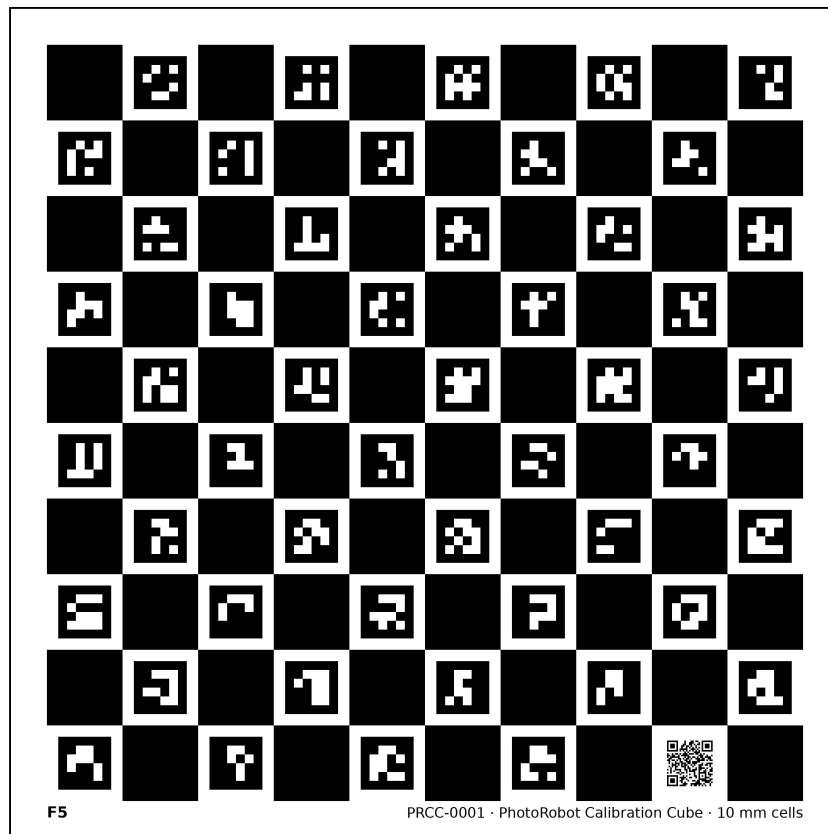

Verify BEFORE cutting, on the GRID corners: outer edge 100.00 mm (both axes) · corner-to-corner 141.42 mm.
Cut ON the frame line (110 × 110 — it hides in the holder rebate). If off, record the measured value with the serial.

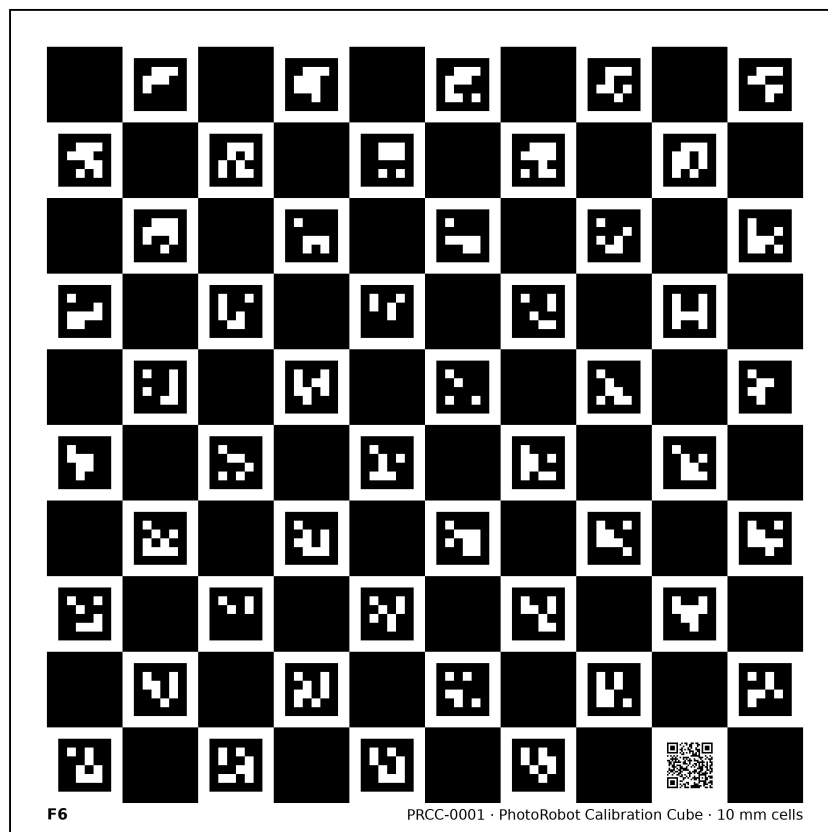

Verify BEFORE cutting, on the GRID corners: outer edge 100.00 mm (both axes) · corner-to-corner 141.42 mm.
Cut ON the frame line (110 × 110 — it hides in the holder rebate). If off, record the measured value with the serial.